

# OUTDOOR LIGHTING PERSPECTIVES®



## Outdoor Lighting Perspectives – Intermatic Timer (HB88RC)

Features include: 7 Day/7 Event programming, Multiple Daily Programming Options, Battery Backup to retain settings during power outage and Easy Programming.

### SETTING THE CLOCK

While holding the Clock button down:

1. Press the DAY button until the display shows the current day.
2. Press the HOUR button until the display shows the current hour.
3. Press the MIN (MINUTE) button until the display shows the current minute.

### SETTING PROGRAMS

Press the PROG (Program) button once.

You will now set up the time in which you want your device turned ON:

1. The number 1 in the lower left hand corner indicates that you are now programming EVENT 1.
2. Press the Day button repeatedly until the display shows the day in which you want the timer to turn on.

The options are:

- a. All days of the week (MO TU WE TH FR SA SU) ***(This will likely be the choice for your lighting)***
  - b. Individual days of the week (MO, etc)
  - c. Weekdays only (MO TU WE TH FR)
  - d. Weekends only (SA SU)
3. PRESS the HOUR and MIN (Minute) buttons to set up the time of day when you want the timer to turn on.
  4. Press the PROG (Program) button once again.
  5. You will now set up the time in which you want your device turned OFF, in EVENT1.

Repeat the ON and OFF program procedures outlined above for each Lighting event (up to 7 events), as needed.

When programming is complete, press the CLOCK button to return to the current time display.

### REVIEWING YOUR EVENT PROGRAMMING

1. In the current time display, press the PROG (Program) button repeatedly to check your settings.
2. When finished, press CLOCK to return to the current time display.

# OUTDOORLIGHTING PERSPECTIVES®

## **SETTING THE MODE- (Please Note this step is very important for unit to run automatically)**

The Mode acts as an ON or OFF override, or sets the Events to Automatic or Random:

1. To complete programming, press MODE repeatedly until display on left reads AUTO

## **OPTIONAL MODES - Manual On/Off and Random**

1. To manually turn on, press MODE until display shows ON (Press MODE again to toggle back to off or automatic).
2. To run the events in a RANDOM mode (ON/OFF is +/- 15 minutes of programmed times) press MODE until (ON/OFF is +/- minutes of programmed times) press MODE until "RDM" is displayed in the upper left hand corner. The RANDOM mode is a security feature that will give your home a more lived-in look.

**BATTERY REPLACEMENT** – battery compartment on back of timer

**NOTE: UNPLUG UNIT WHILE REPLACING BATTERY** (or timer may not operate correctly)

1. This timer runs on one AA battery to retain settings during power outages.
2. To remove the battery, unscrew the battery door, using a Phillips screwdriver.
3. Remove the battery and replace with a fresh AA battery.
4. Tightly screw the battery door in place.

## **MANUFACTURER CUSTOMER SERVICE CONTACT-**

1-815-675-7000 [WWW.INTERMATIC.COM](http://WWW.INTERMATIC.COM)

## **TO DELETE UNWANTED PROGRAMS-**

1. Go to the program, press and hold the mode button, then press the program button.
2. This zero's out all previous programs.